


## Mise en service du BPPOH-1200B version eau/Huile

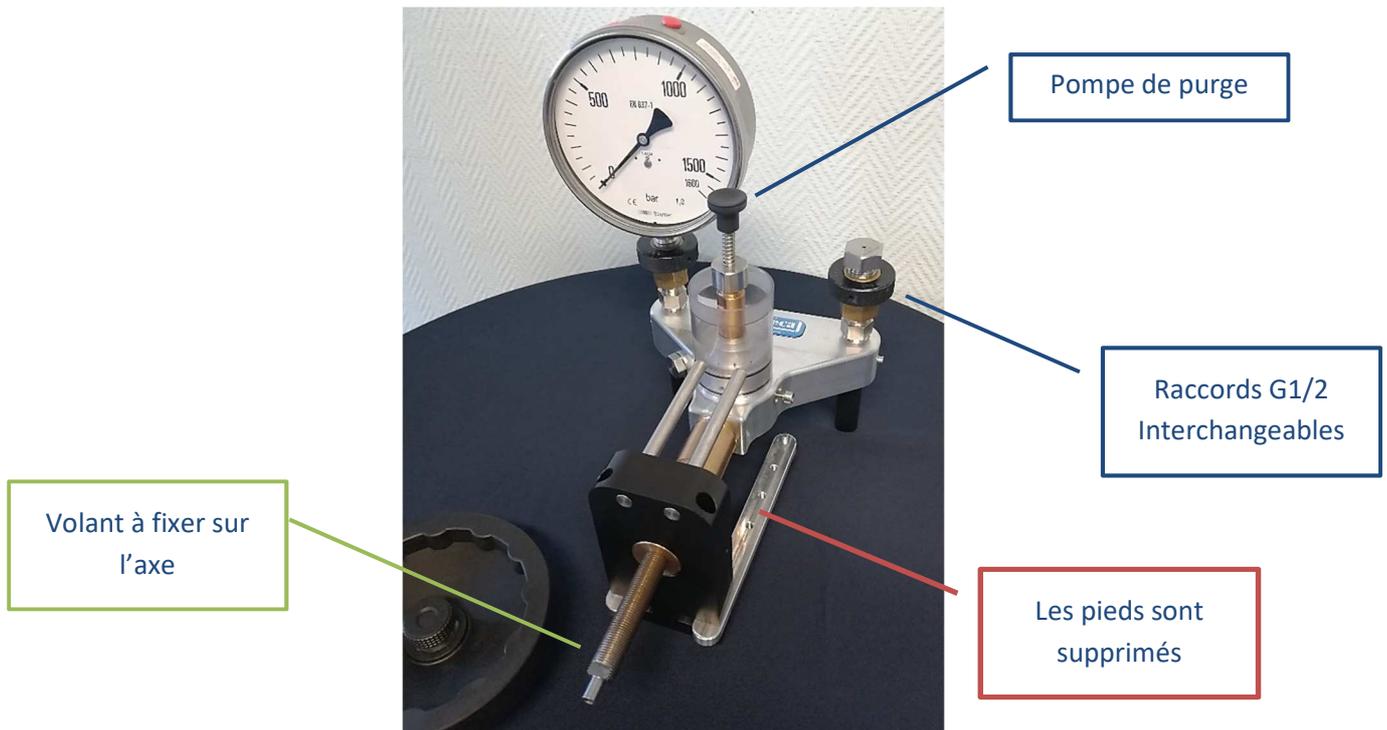

### Mise en service de l'appareil :

- Remplir le réservoir avec de l'eau distillée
  - Pomper avec la petite pompe située sur le dessus du réservoir jusqu'à ce que l'eau sorte du/des raccords G1/2 (manomètre de référence et/ou manomètre à tester)
  - Installer les manomètres sur les raccords G1/2, bien penser au sens de la bague d'étanchéité et joints dans le raccord
  - Faire 2 tours avec le volant dans le sens inverse des aiguilles d'une montre
  - pomper jusqu'à la dureté de la pompe, tu observes déjà une légère pression
  - faire tourner le volant dans le sens inverse des aiguilles d'une montre jusqu'à la butée (l'eau dans le réservoir descend, ajuster si besoin) des bulles peuvent remonter dans le réservoir.
  - faire 2 tours dans le sens des aiguilles d'une montre puis pomper jusqu'à la dureté
- L'appareil est prêt à fonctionner, il est purgé.

### Montée en pression pour prise de mesure :

- Faire tourner le volant dans le sens des aiguilles d'une montre pour la montée en pression jusqu'à 1200 bar max

**Remarque :** une vanne de réglage fin sera proposée en option

- Pour faire descendre la pression tourner le volant dans le sens inverse des aiguilles d'une montre

### ENGLISH translation :

#### Putting the unit into operation :

- Fill tank with distilled water
  - Pump with the small pump on top of the tank until water comes out of the G1/2 connection(s) (reference manometer and/or manometer to be tested).
  - Install manometers on G1/2 fittings, paying particular attention to the direction of the sealing ring and gaskets in the fitting.
  - Turn the handwheel counter-clockwise 2 times
  - Pump to pump hardness, you'll already notice a slight pressure
  - Turn the handwheel counter-clockwise as far as it will go (the water in the tank goes down, adjust if necessary) bubbles may appear in the tank.
  - Make 2 clockwise turns, then pump to hardness.
- The unit is ready to operate, and has been purged.

#### Pressure build-up for measurement :

- Turn the handwheel clockwise to build up pressure up to 1200 bar max.

*Note :* A fine control valve is available as an option.

- To reduce pressure, turn the handwheel anti-clockwise.